

Sunpro Brand by Arizona RV Parts, Inc

Windshield Cover Installation Instructions

Please read all of the Installation Instructions before starting.

First - Please check that each cover is correct and fits before drilling and only use the proper size drill bit and pay close attention to each step, this will better ensure that you do not drill a hole in the wrong place. If there are any problems with the covers fitting, call us before you drill. Sunpro Manufacturing & Arizona RV Parts, Inc. will not be held responsible for an improper installation of any kind.

Second - Please take the time to align the windshield & side window covers before installing. The windshield cover & side covers will have a "Good Fit" if installed properly. The most common mistake made during installation is from not aligning the covers properly. Quite often the window covers are being installed on the wrong side, inside out or upside down, please pay attention.

Third - It is best to have someone help you with the installation of your Sunpro Windshield Cover Kit. You will be installing it from side to side; DO NOT start in the center. You will need to determine which side will be best to start from. For example, if you have a front entry door with an awning you would want to start on that side. It is always best to work away from obstacles, not toward them.

The following instructions are intended for a two person installation.

If you are installing the covers by yourself then you will need to tape the covers in place.

Windshield Cover Kit: (If you requested Dual Lock - See Below)

Center - Horizontal & Vertical:

1. With a person located on each side of the windshield center the windshield cover over the windshield (Side to Side & Top to Bottom). If possible have someone stand back and make sure it is centered and that there is nothing in the way such as mirrors or antennas. This will help to insure a proper fit.

Installing Top Corner Fasteners:

2. Pull on each top corner to make sure the windshield cover fits snug before marking the RV for pilot holes. After making sure of a snug fit then mark & drill the top right or left snap/twist lock pilot hole.
3. Apply a small amount of silicone to the thread of the snap/twist lock then tighten. (Do not over tighten)
4. With the top right or left snap/twist lock now fastened, pull the cover tight and mark and drill the opposite top side pilot hole. Do not install any other top fasteners yet.

Both of the top corner fasteners should be installed and the windshield cover should be attached at those two points.

Installing Bottom Corner Fasteners:

5. With a person located on each side of the cover, pull the bottom corners tight until it is wrinkle free (Or as close as it is going to get) and mark for the pilot hole on either side you choose.
6. Drill the hole and install the fastener and attach the cover to the fastener. Now do the same on the opposite side. Do not install the bottom center fastener at this time.

Installing the Other Fasteners:

7. You will need to start in the center and then do the other two top fasteners (if your cover has them)
8. Pull the cover up to get snug and after checking for wrinkles mark pilot hole.
9. Drill and install top center fastener and attach cover. Follow this step for the other two top fasteners if applicable.
10. Install the bottom center fastener the same way as the top center.

Dual Lock Installation:

If you requested Dual Lock follow the same steps outlined above without the drilling of pilot holes. Leave the Dual Lock that will be fastened to the RV attached to the cover. After you have the cover in position remove the protective liner from the Dual Lock on either top corner and press it into place. Proceed as described above. Clean the mounting surface of the RV thoroughly with rubbing alcohol before attaching the Dual Lock.

Side Window Cover Installation:

1. With a person at the front and rear of the cover, hold it up to the window and center it to the frame or adjust it for the best fit (depending on the RV, centering the cover might not provide the best fit)
2. Now mark the top front and install the snap/twist lock using the same method as the windshield cover kit.
3. Pull the side cover snug toward the rear and install the top rear snap/twist lock. *Do not install the top center fastener at this time; this can be done after the bottom fasteners are installed.*


Both of the top corner fasteners should be installed and the side window cover should be attached at those two points.

Bottom Fasteners:

4. Pull each corner to remove any wrinkles and then mark the pilot hole for the bottom front fastener. Drill and install fastener and attach cover.
5. Pull the rear corner tight and mark the pilot hole. Drill and install the fastener and attach the cover.
6. Install the top center fastener and attach cover.

In some cases the installation might vary. With a little fore thought, many problems can be avoided.

If you are unsure of any step please call and ask for help! 800-789-5588

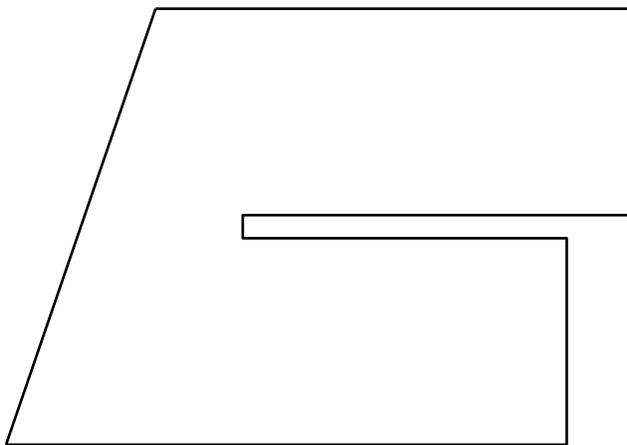

Some of our Driver Door covers are provided with a slit that allows you to open the door without taking them off. It is best to get help in positioning the cover and tape it into place before drilling any holes.

This type of cover is a little more complex to install, please take your time.

**Drill Bit Size – Screws 7/64”
Rivets – 1/8”**

Fastener Installation:

Twist Locks – In most cases the eyelets will come pre-installed on the covers and you will only need to install the twist lock on the RV.

1. After you have the cover in place, use a pencil and mark the center hole of the eyelet.
2. This step can be done in one of two ways.

Option 1 – After you have marked the eyelet hole with a pencil, you can use a straight edge and mark the center of the hole vertically and horizontally and then place the twist lock in position and center it with horizontal and vertical lines. Mark the 2 holes with a pencil and move the twist lock out of the way and drill the holes for the screw or rivet. Fasten with rivet or screws that have been supplied.

Option 2 – After the hole has been marked, set the twist lock on top of the pencil mark and center it by eye and once it is centered mark the 2 holes with a pencil and after moving the twist lock out of the way drill the screw or rivet holes. Fasten with rivet or screws that have been supplied.

Snaps – If the snap and socket are already installed on the covers; Position the cover and lift the snap up at an angle and with a pencil, mark where the center of the snap should be. Move cover out of the way and drill screw or rivet hole. Fasten with rivet or screws that have been supplied.

If the snap and socket have not been installed on the covers; Position the cover and using the drill bit that is required for your fastener (screw or rivet) drill through the cover and be sure to start the hole in the RV. Move the cover out of the way and finish drilling the hole. Fasten with rivet or screws that have been supplied.

www.sunpromfg.com

For a complete line of sun protection products or anything you might need for your RV visit our website or call us toll free @ **800-789-5588**.